


TNT40说明书

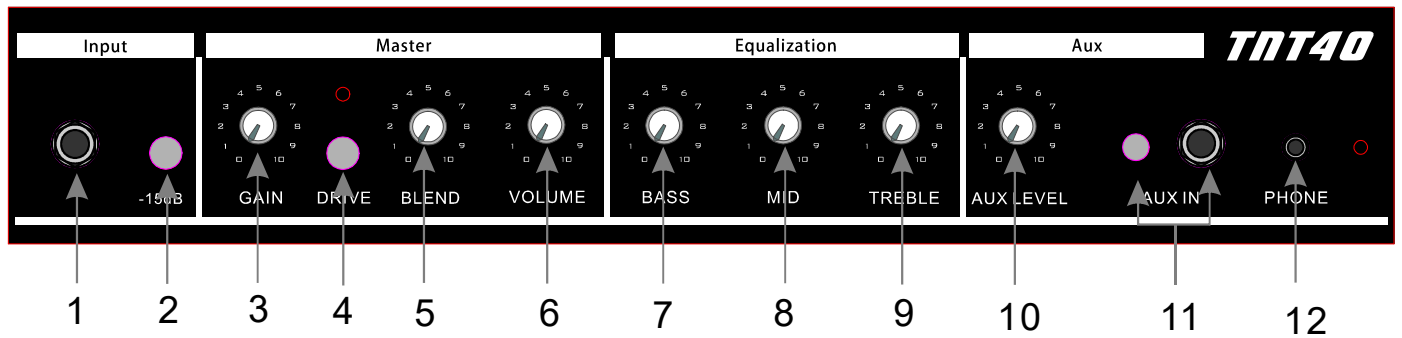

1、INPUT

For connection of Bass

2、-15DB

Decrease the signal using for active pickup

3、GAIN

Set the level of gain present in the preamp

4、DRIVE S/W

Active the Drive channel

5、BLEND

Adjust the proportion of clean and drive sound

6、VOLUME

This control sets the volume level for the Amp

7、Bass

Controls the low frequency EQ in the preamp

8、MID

Controls the mid frequency EQ in the preamp

9、TREBLE

Controls the high frequency EQ in the preamp

10、AUX LEVEL

Sets the volume level for Aux in

11、AUX IN

Socket for connection of external CD player

12、PHONE

Socket for connecting external headphones

Connecting headphones automatically isolates the internal speaker

TECHNICAL SPECIFICATION

Power output:	40W
Power Supply:	AC220V/50HZ/AC110V 60HZ
Dimensions(H×W×D):	410×390×310(mm)
System Hum and Noise:	≥70dB
Input impedance:	> 1MΩ
Speakers impedance:	8Ω (10 ')

1、输入插孔(INPUT)

用于连接贝司

2、衰减(-15 DB)

按下这个按钮衰减输入信号15dB,并在输出端补偿相应的输出
这个衰减主要拥有主动电路或高出力拾音器的贝司设计

3、增益调节(GAIN)

用于调节过载电路效果大小

4、过载开关(DRIVE)

用于激活过载电路,以获得过载效果

5、干湿度调节(BLEND)

用于调节干信号以及过载信号的比例

6、音量调节(VOLUME)

用于调节整机音量

7、低频(BASS)

用于低音调节

8、中频(MID)

用于调节扩音器的中频,当旋钮位于中间位置的时候不会出现中频进行任何修正,逆时针旋转减少中频使用声音更加柔软

9、高频(TREBLE)

用于调节高频

10、辅助输入调节(AUX LEVEL)

用于辅助输入音量调节

11、音乐输入(AUX IN)

用于音乐输入

12、耳机输入(PHONE)

用于连接耳机,这时机内扬声器连接会断开

主要技术指标:

输入功率:	40W
电源:	AC220V/50HZ/AC110V 60HZ
外型尺寸(H×W×D):	410×390×310(mm)
信噪比:	≥70dB
输入阻抗:	> 1MΩ
扬声器阻抗:	8Ω (10 ')