


G240/G260

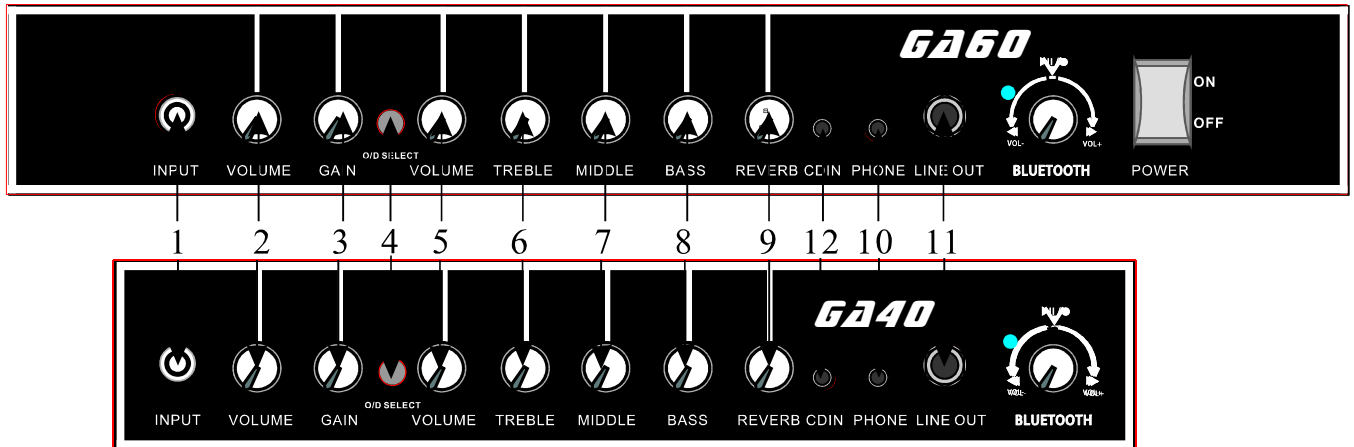

1、Input

For connection of guitar.

2、Volume

This control sets the volume level for the Clean channel.

3、Gain

The Gain control sets the input level of the lead channel.

4、Channel Select Switch

The Channel Select Switch determines which channel, Lead or Clean, is active.

5、Volume

Use this control to set the overall level of the Lead channel.

6、Treble

Controls the high frequency EQ in the preamplifier.

7、Middle

Controls the mid frequency EQ in the preamplifier.

8、Bass

Controls the low frequency EQ in the preamplifier.

9、Reverb

The Reverb control adjusts the overall reverb level.

10、Phone

Socket for Connecting external headphones.

11、Line OUT

Sockets for connection to recording equipment or for connection to a P. A. system.

12、CD IN

Sockets for connection of external CD player.

Bluetooth

Mode touch:plag/pause

Mode hold on:on/off Bluetooth

right touch:Nexe song

right hold on:volume increase

Left touch:last song

Left hold in:volume decrease

TECHNICAL SPECIFICATION

Power output :	60G 60W
	40G 40W
Power Supply :	AC220V/50HZ/ AC110V 60HZ
Dimensions(H×W×D) :	60G 368X430X210(MM)
	40G 280X330X190(MM)
System Hum and Noise :	≥70dB
Input impedance :	>1MΩ
Speakers impedance :	60G 8Ω(10" speaker)
	40G 8Ω(8" speaker)

1、輸入插孔(INPUT)

用于連接吉它。

2、正常音量調節(CLEAN VOLUME)

用于調節正常通道整機音量。

3、增益調節(GAIN)

用于調節失真通道的前置放大。

4、失真效果開關(DRIVE SELECT)

用于選擇失真通道及正常通道。

5、失真音量調節(DRIVE VOLUME)

用于調節失真通道的整機音量。

6、高音調節(TREBLE)

用于調節高音區的提升/衰減量。

7、中音調節(MIDDLE)

用于調節中音區的提升/衰減量。

8、低音調節(BASS)

用于調節低音區的提升/衰減量。

9、混響調節(REVERB)

混響效果可使您的吉它產生在空曠的房間或大廳演奏的效果。

10、耳機輸出插口(PHONE)

用于連接耳機，這時機內揚聲器連接會斷開。

11、綫路輸出插孔(LINE OUT)

用于連接其它的錄音設備或者功率放大器。

12、CD輸入插孔(CD IN)

Bluetooth蓝牙

MODE键单击：开始/暂停音乐播放

MODE键长按：打开/关闭蓝牙功能

右边扭到底一下：切换到下一首歌曲

右边扭到底不放：音量增加

左边扭到底一下：切换到上一首歌曲

左边扭到底不放：音量减少

主要技术指标：

输出功率：	60G 60W
	40G 40W
电源：	AC220V/50HZ/ AC110V 60HZ
外型尺寸(H×W×D)：	60G 368X430X210(MM)
	40G 280X330X190(MM)
信噪比：	≥70dB
输入阻抗：	>1MΩ
扬声器阻抗：	60G 8Ω(10" speaker)
	40G 8Ω(8" speaker)